



Customer Service: PO Box 1848, Grand Island, NE 68802-1848  
1-877-214-4470 | Email: [info@snapsafe.com](mailto:info@snapsafe.com)

# Owner's Manual Two-Gun Keypad Vault

Item No.: 75430

Ext. Dimensions: 12.7" x 9.0" x 8.8"

Weight: 12.8 Lbs

Power: 4 AAA batteries (not included)

## POWER

1. Open the safe with either the mechanical override key or a previously programmed code.
2. Locate the battery compartment door on the top interior panel.
3. Swing the battery compartment door open by pressing the tab on the door.
4. Gently remove the 4-pack battery carrier from the door and insert 4 high quality AAA batteries.
5. Place the battery carrier back into the door and close.

**Note:** Replace all batteries at the same time. Use high quality batteries for best performance



## PROGRAMMING/RESET COMBINATION CODE

1. Open the safe with either the mechanical override key or a previously programmed code.

**Note:** the safe ships with the default code of 1-2-3-4. To maintain the security of this product, a new code must be programmed before using.

2. Locate the program button inside of the safe near the battery compartment. Press and hold the program button for 3 seconds. After the green light blinks and beeps two times, release the button.
3. Enter the new 4 to 6 digit code. Press and release the program button to enter the new code. The yellow light will blink and beep twice.



4. Re-enter the new 4 to 6 digit code. Press and release the program button to confirm the new code. The green light will blink and beep twice before returning to normal operation.
5. With the lid open, verify the new code has been programmed and is functional by entering the new code. The safe motor should cycle after each correct entry.

**Note:** Become comfortable with the operation of your safe before mounting your safe and storing anything of value inside.

## OPEN GUN VAULT BY COMBINATION CODE

Enter the previously programmed 4 to 6 digit code to open the safe.

**Note:**

- Pressing a button should illuminate the keypad and green indicator light.
- When a correct code is entered, the green indicator light will blink and beep 1 time as the door pops open.
- If an incorrect code is entered, the red indicator light will blink and beep 2 times.
- After five incorrect entries, the red indicator light will blink and beep for the entire 2 minute lockout period. The safe can only be opened by the mechanical key during this time..

## LOW BATTERY WARNING

To check the battery level, press any button to illuminate the keypad. If the battery level is lower than 25% the yellow indicator light will blink for approximately 20 seconds. The batteries should be replaced immediately to ensure proper function.

## KEYPAD TONES ON/OFF

Press and hold the "1" button for three seconds to toggle sound ON and OFF.

**Note:** Toggling the sound off will turn the keypad, program, and alarm beeps off. Toggling the sound on will turn the keypad, program, and alarm beeps on.

