



Customer Service: PO Box 1848, Grand Island, NE 68802-1848
1-877-214-4470 | Email: info@snapsafe.com


Owner's Manual Drop Box™ Keypad Vault

Item No. 75431

POWER

1. Open the safe with either the mechanical override key or a previously programmed code.
2. Locate the battery compartment door on the top interior panel.
3. Swing the battery compartment door open by pressing the tab on the door.
4. Gently remove the 4-pack battery carrier from the door and insert 4 high quality AAA batteries.
5. Place the battery carrier back into the door and close.

Note: Replace all batteries at the same time. Use high quality batteries for best performance.

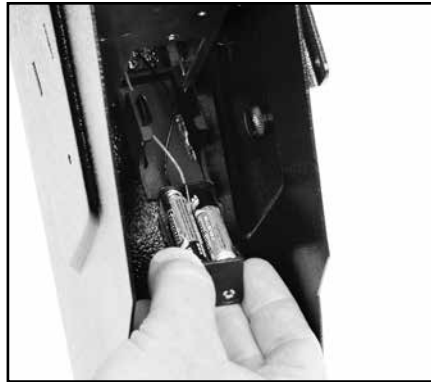


PROGRAMMING/RESET COMBINATION CODE

1. Open the safe with either the mechanical override key or a previously programmed code.

Note: The safe ships with the default code of 1-2-3-4. To maintain the security of this product, a new code must be programmed before using.

2. Locate the program button inside of the safe near the battery compartment. Press and hold the program button for 3 seconds. After the keypad blinks green and beeps two times, release the button.
3. Enter the new 4 to 6 digit code. Press and release the program button to enter the new code. The keypad will blink green and beep two times.

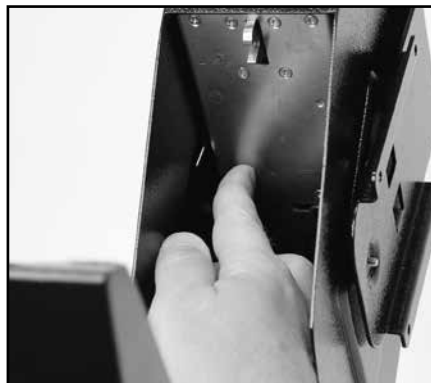

4. Re-enter the new 4 to 6 digit code. Press and release the program button to confirm the new code. The keypad will blink green and beep two times before returning to normal operation.
5. With the lid open, verify the new code has been programmed and is functional by entering the new code. The safe motor should cycle after each correct entry.

Note: Become comfortable with the operation of your safe before mounting your safe and storing anything of value inside.

OPEN GUN VAULT BY COMBINATION CODE

Enter the previously programmed 4 to 6 digit code to open the safe.

Note:

- Pressing a button should illuminate the keypad blue.
- When a correct code is entered, the keypad will turn green and the door should open.
- If an incorrect code is entered, the keypad will turn blue for 2 seconds and beep two times.
- After five incorrect entries, the safe will beep and lockout for 2 minutes. The safe can only be opened by the mechanical key during this time.

LOW BATTERY WARNING

To check the battery level, press any button to illuminate the keypad. If the battery level is lower than 25% the keypad will illuminate both green and blue. The batteries should be replaced immediately to ensure proper function.

KEYPAD TONES ON/OFF

Press and hold the "3" button for three seconds to toggle sound ON and OFF.

Note: Toggling the sound off will turn the keypad, program, and alarm beeps off. Toggling the sound on will turn the keypad, program, and alarm beeps on.



Item No.: 75431
Ext. Dimensions: 13.5" x 7.5" x 3.6"
Weight: 7.8 Lbs
Power: 4 AAA batteries (not included)