



Owner's Manual Keypad Vault

Item No. 75432

POWER

1. Open the vault with either the mechanical override key or a previously programmed code.
2. Locate the battery compartment door.
3. Swing the battery compartment door open by pressing the tab on the door.
4. Insert 4 high quality AA batteries.

Note: Replace all batteries at the same time. Use high quality batteries for best performance



PROGRAMMING/RESET COMBINATION CODE

1. Open the vault with either the mechanical override key or a previously programmed code.

Note: The vault ships with the default code of 1-2-3-4. To maintain the security of this product, a new code must be programmed before using.

2. Locate the red program button inside of the vault. Press and hold the program button for 3 seconds. After the green light blinks and beeps two times, release the button.
3. Enter the new 4 to 6 digit code. Press and release the program button to enter the new code. The yellow light will blink and beep twice.
4. Re-enter the new 4 to 6 digit



code. Press and release the program button to confirm the new code. The green light will blink and beep twice before returning to normal operation.

5. With the lid open, verify the new code has been programmed and is functional by entering the new code. The vault motor should cycle after each correct entry.

Note: *Become comfortable with the operation of your vault before mounting your vault and storing anything of value inside.*

OPEN VAULT BY COMBINATION CODE

Enter the previously programmed 4 to 6 digit code to open the vault.

Note:

- Pressing a button should illuminate the keypad blue.
- When a correct code is entered, the keypad will turn green and the door should open.
- If an incorrect code is entered, the keypad will turn blue for 2 seconds and beep two times.
- After five incorrect entries, the vault will beep and lockout for 2 minutes. The vault can only be opened by the mechanical key during this time.

LOW BATTERY WARNING

To check the battery level, press any button to illuminate the keypad. If the battery level is lower than 25% the keypad will illuminate both green and blue. The batteries should be replaced immediately to ensure proper function.

KEYPAD TONES ON/OFF

Press and hold the "1" button for three seconds to toggle sound ON and OFF.

Note: *Toggling the sound off will turn the keypad, program, and alarm beeps off. Toggling the sound on will turn the keypad, program, and alarm beeps on.*



Item No.: 75432

Ext. Dimensions: 12.0" x 8.3" x 2.6"

Int. Dimensions: 11.5" x 6.0" x 2.4"

Weight: 5.5 Lbs

Power: 4 AA batteries (not included)



This is a California-approved firearms safety device that meets the requirements of California Penal Code Section 12088 and the regulations issued thereunder.

SnapSafe[®]
A Hornady[®] Company

Customer Service: PO Box 1848, Grand Island, NE 68802-1848
1-877-214-4470 | Email: info@snapsafe.com