

Owner's Manual



This is a California-approved firearms safety device that meets the requirements of California Penal Code Section 12088 and the regulations issued thereunder.



TWO-GUN KEYPAD VAULT

Item No. 95430

 **WARNING: Reproductive Harm**
www.P65Warnings.ca.gov




P.O. Box 1848, Grand Island, Nebraska 68802-1848
308-382-1390 • 800-338-3220 • Fax: 308-382-5761
Hornady.com/contact



POWER

1. Open the safe with either the mechanical override key or a previously programmed code.
2. Locate the battery compartment door on the top interior panel.
3. Swing the battery compartment door open by pressing the tab on the door.
4. Gently remove the 4-pack battery carrier from the door and insert four high-quality AAA batteries.
5. Place the battery carrier back into the door and close.

Note: Replace all batteries at the same time. Use high quality batteries for best performance

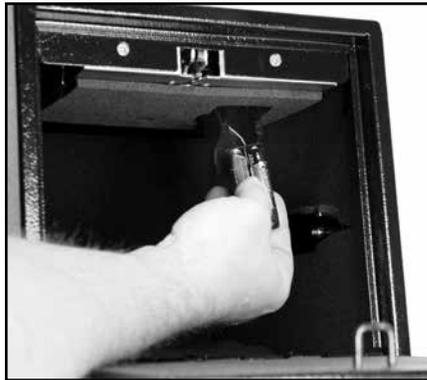

PROGRAMMING/RESET COMBINATION CODE

1. Open the safe with either the mechanical override key or a previously programmed code.

Note: The vault ships with the default code of 1-2-3-4. To maintain the security of this product, a new code must be programmed before using.

2. Locate the program button inside the safe near the battery compartment. Press and release the program button. The light blinks and beeps two times.
3. Enter the new 4- to 6-digit code. Press and release the program button to enter the new code. The light will blink and beep twice.
4. Re-enter the new 4- to 6-digit code. Press and release the program button to confirm the new code. The light will blink and beep twice before remaining on for 6 seconds. After the light turns off, the safe returns to normal operation.



5. With the lid open, verify that the new code has been programmed and is functional by entering the new code. The safe motor should cycle after each correct entry.

Note: Become comfortable with the operation of your safe before mounting your safe and storing anything of value inside.

OPEN GUN VAULT BY COMBINATION CODE

Enter the previously programmed 4 to 6 digit code to open the safe.

Note:

- Pressing a button should illuminate the keypad in green.
- When a correct code is entered, the keypad will turn green and the door should open.
- If an incorrect code is entered, the keypad will blink red and beep one time.
- After five incorrect entries, the safe will beep and lock out for 2 minutes. The safe can only be opened by the mechanical key during this time.

LOW BATTERY WARNING

To check the battery level, press any button to illuminate the keypad. If the battery level is lower than 25%, the keypad will illuminate in yellow. The batteries should be replaced immediately to ensure proper function.

KEYPAD TONES ON/OFF

Press and hold the "1" button for three seconds to toggle sound ON and OFF.

Note: Toggling the sound off will turn the keypad, program and alarm beeps off. Toggling the sound on will turn the keypad, program and alarm beeps on.



Item No.: 95430

Ext. Dimensions: 12.7" x 9.0" x 8.8

Int. Dim.: 11.4" x 8.6" x 6.3"

Weight: 12.8 Lbs

Power: 4 AAA batteries (not included)

Hornady Security® electronic components are covered by a one-year warranty from the date of purchase. See Hornady.com for details.