

IF YOU FORGET THE PASSCODE

FIRST PASSCODE

1. With door open, press reset button inside the door.
2. Yellow light is on, enter new passcode within ten seconds.
3. Enter new code (3 to 8 digits) followed by "*" or "#".
4. Safe will beep and yellow light will turn off.

SECOND PASSCODE

1. With door open, press "0 - 0" then press reset button
2. Yellow light is on, enter new passcode within ten seconds.
3. Enter new code (3 to 8 digits) followed by "*" or "#".
4. Safe will beep and yellow light will turn off.

CARE & MAINTENANCE

- The locking lugs may need to occasionally be lubricated with a clear grease (petroleum jelly) to insure proper operation.
- Do not overfill the Trunk Safe as it may hinder the operation of the locking lugs.
- Change batteries periodically.

Item No.: 75406

Ext. Dimensions: 7.0" x 42.0" x 13.0"

Weight: 69 Lbs

Power: 4 AA batteries (not included)



Customer Service: PO Box 1848, Grand Island, NE 68802-1848
1-877-214-4470 | Email: info@snapsafe.com



Owner's Manual Trunk Safe II

Item No. 75406

SETUP

OPEN SAFE WITH OVERRIDE KEY

1. Insert override key and turn left to unlock safe.
2. Turn knob to left and open safe door.
3. Override key cover is located in box with key.




INSTALL BATTERIES

1. Remove battery compartment cover inside the door.
2. Insert 4 AA batteries
3. Replace the battery cover.
4. Do not close door before testing digital lock.



TEST DIGITAL LOCK

1. With door open, turn knob right to put locking door bolts in lock position (closed).
2. Remove override key and store in a secure place. NEVER STORE KEYS INSIDE SAFE.
3. Enter the preset passcode: 1-5-9-# OR 1-2-3-4-5-6-#
4. Turn knob to left (open) within 5 seconds.
5. Lock bolts should recede into the unlocked position.

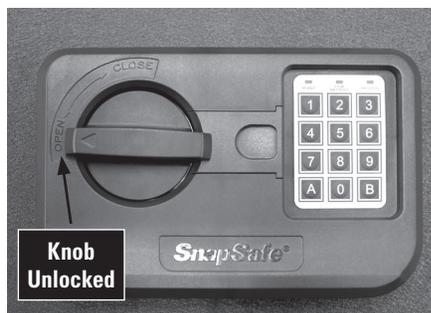

PROGRAM A NEW PASSCODE

1. With door open, press reset button inside door.
2. Yellow light is on, enter new passcode in 10 seconds.
3. Enter new code (3 to 8 digits) followed by an "*" or "#".
4. Safe will beep and yellow light will turn off.

NOTE: The factory pre-set code will not work after a new passcode is programmed.



OPERATION

TO OPEN THE SAFE WITH PASSCODE

1. To unlock and open safe, enter the passcode followed by an "*" or "#".
2. Turn door entry knob to the left and open door.

TO CLOSE THE SAFE

1. Close the door and hold it in the closed position.
2. Turn door entry knob to right to engage the lock bolts and lock safe.

SECURE LOCKOUT PERIODS

If the wrong code is entered the first three times in a row, the digital keypad will begin a 15-second secure lockout period. The second three times the passcode is entered incorrectly, the lockout period increases to 5 minutes. The third three times the passcode is entered incorrectly, the lockout period increases to 15 minutes. During this secure lockout period, the keypad will become disabled.

Once the lockout period has expired, the safe can be unlocked using the correct passcode.

You may use the override key to open safe, but keypad will complete the full lockout period.

OVERRIDE ACCESS KEY

If the passcode is unavailable or your keypad fails due to dead batteries or another malfunction, you can open the safe using the override access key (see the SETUP section).

REPLACING BATTERIES

NOTE: The passcode will not be erased if the batteries become weak or are removed.

To replace the batteries, follow the "Install Batteries" in the SETUP section. If your batteries are completely dead and you cannot open the safe by using the digital keypad, use the override access key to open safe and access the battery compartment.

NOTE: It is NOT RECOMMENDED to use non-alkaline or rechargeable batteries.