

## LOW BATTERY WARNING

If the batteries become weak, the keypad will remain red during operation. Replace batteries immediately to ensure proper operation of the safe.

## SECURITY CABLE INSTALLATION


There are holes located on both sides of the safe for installing the security cable.

1. Loop the cable around a secure object and then insert the threaded end of the cable through the loop of the cable.
2. Remove the plastic plug on the side of the safe.
3. Open the drawer just far enough that the hole in the side of the drawer aligns with the hole in the side of the housing.
4. Insert the threaded stud into the side of the safe and install the nut. **NOTE:** The nut only needs to be tightened until the nylon thread lock engages.

**NOTE:** The drawer can be removed to make installing the security cable easier or to permanently bolt down the safe.

To remove the drawer, fully extend the drawer and then locate the small lever inside each drawer slide. Press up on the right lever and down on the left lever. With the levers pressed, carefully pull out the drawer for removal.

To reinstall the drawer, carefully align the slides on each side and then press the drawer in. The levers should click into place.

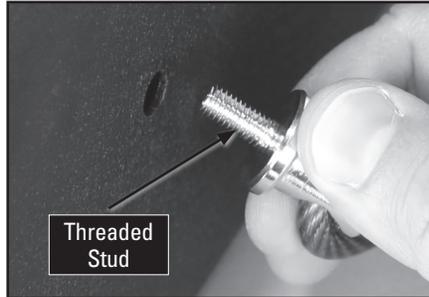

# SnapSafe®

A Hornady® Company



## Owner's Manual Under Bed Safe

Item No. 75402

Ext. Dimensions: 26.0" x 5.0" x 20.0"

Weight: 55 Lbs

Int. Dimensions: 23.5" x 3.5" x 14.3"

Power: 4 AA batteries (not included)

# SnapSafe®

A Hornady® Company

Customer Service: PO Box 1848, Grand Island, NE 68802-1848  
1-877-214-4470 | Email: info@snapsafe.com

## POWER

1. Remove key override cover by pressing on either end of the cover.
2. Open the safe with the mechanical override key.
3. Remove the battery cover inside the door.
4. Insert 4 AA batteries and replace the battery cover.
5. Do not close the door before testing digital lock.




**Note:** Do not store keys in safe.

## PROGRAMMING/RESET COMBINATION CODE

**Note:** The safe is pre-programmed with default code 1-2-3-4-ENTER. You must change this code before storing valuables to ensure the security of the product.

1. Open the safe with either the mechanical override key or default code.
2. Press and hold the red program button inside the door. The safe will beep twice and the keypad will blink.
3. Enter the new code (4 to 6 digits) then press and release the program button. The keypad should beep and blink two times.
4. Re-enter the same new code (4 to 6 digits) then press and release the program button. The keypad should beep and blink three times.

**Note:** If a mismatched code is entered during programming, the keypad will blink red and beep three times. Return to step 2 to enter a new code.

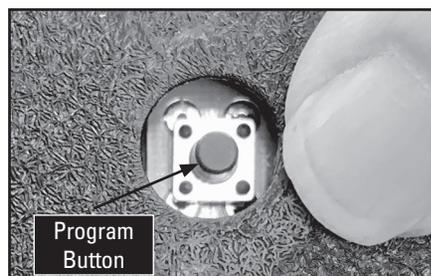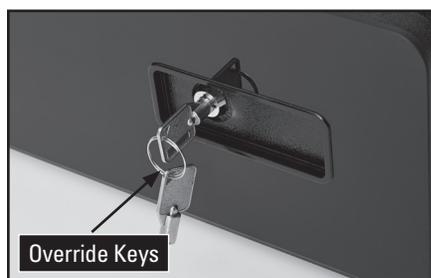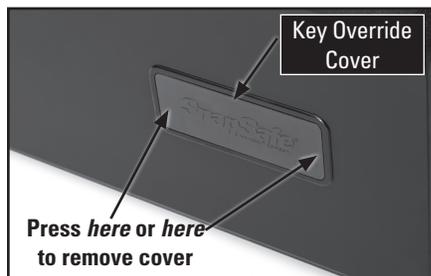

5. With the safe open, enter the new code followed by ENTER to confirm the safe is working properly. The motor should cycle after each correct entry.

**Note:** Become comfortable with the operation of your safe before storing anything of value inside.

## OPEN SAFE BY COMBINATION CODE

**Note:** To save batteries, the keypad lights turn off after approximately 10 seconds of inactivity. To enter a code, the keypad must first be turned on by pressing any of the buttons in the center of the front panel.

- With the keypad on, enter the programmed code followed by ENTER.
  - When a correct code is entered, the keypad will beep and blink blue one time.
  - When an incorrect code is entered, the keypad will beep and blink red two times. After five incorrect entries, the safe will beep and lock out for 3 minutes.
- The safe drawer should open a few inches automatically under spring tension.
- If five incorrect codes are entered, the safe will beep and the keypad will deactivate for 5 minutes. The safe can only be opened with the manual key during this time.

**Note:** If the safe does not open automatically, make sure the drawer front is not blocked by an object (i.e. carpet, bedding, clothes, etc.) and check to make sure the internal contents are not interfering with the top inside of the safe.

## TO CLOSE THE SAFE

- Push the center of the drawer until you hear the locking lugs on both sides of the drawer lock into place.

**Note:** The drawer is placed under spring tension, so the last few inches can be a little more difficult to close. Press firmly on the drawer front, but excessive force should not be used as it may damage the drawer slides or spring mechanism.

## KEYPAD TONES ON/OFF

Press and hold the "1" button for three seconds to toggle sound ON and OFF.

**Note:** Toggling the sound off will turn the keypad, program, and alarm beeps off. Toggling the sound on will turn the keypad, program, and alarm beeps on.